

X10 Accessories




Hydro-Force Series

- High pressure connectors
- Lighted probe tip
- 1-liter and 2-liter cylinders
- Wall-mounting bracket

High Pressure Connectors

The connectors installed on the X-10 extension probe and the matching connectors on the X-10C Chemical Cylinder have been improved to a new high pressure style. The original connectors were a pneumatic style, silver in color. The new high pressure connectors are gold colored. The new connectors provide a higher pressure rating to match the constant pressure applications, such as the hand-held sprayer, and provide for easier bottle-to-probe connections. All X-10 systems shipped after July 2002 will include the new connectors. All X-10C Chemical Cylinders shipped after July 2002 will have the new gold-colored connectors unless otherwise specified at the time of order.

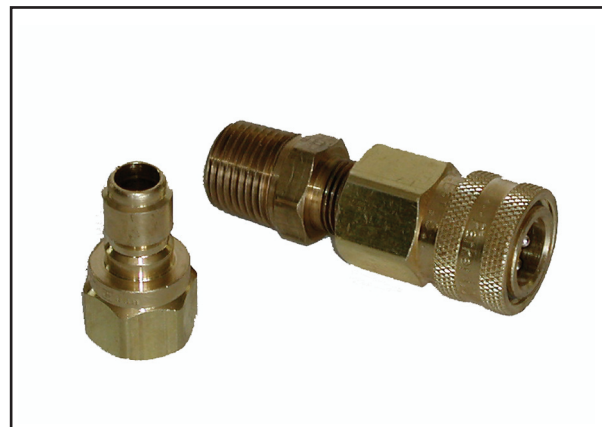

New high pressure connectors



X-10 light assembly

Light

The X-10 light assembly provides a high intensity low voltage lamp in a rugged enclosure for mounting in the X-10 probe tip. The lamp provides 50 watts of high power illumination forward of the probe tip. The lamp is useful when performing extractions in very dark cells or other areas. The lamp assembly is machined from one piece of aluminum with a heavy duty lamp guard at the front. The lamp assembly is installed by first removing the round X-10 probe tip and installing the lamp assembly with wire harness. Each X-10 light assembly is provided with a portable battery power supply in a metal enclosure and a wall plug-in battery charger. Contact the factory for more details.

X-10C Chemical Cylinders

Two chemical cylinder sizes can be utilized with the X-10 Extension Probe. The standard X-10C Chemical Cylinder provides 1-liter chemical capacity. A 1-liter bottle will provide about 13 bursts of chemical, each containing about 7 grams of Oleoresin Capsicum (Pepper Spray). The 2-liter bottle provides approximately 25 bursts of chemical, each containing about 7 grams of Oleoresin Capsicum. The 1-liter bottle is recommended for most extraction activities when only one cell is involved. The 2-liter cylinder may be more appropriate when there are multiple extractions or when using the hand-held sprayer.



1-liter and 2-liter chemical cylinders

X-10MT

Wall Mounting Bracket

The X-10MT allows easy X-10 Extension Device storage when not in use. The heavy metal mounting bracket can be either wall mounted or railing mounted using two pipe clamps. The X-10MT is designed to hold the X-10 Extension Device with X-10C Chemical Cylinder included. The X-10MT can be mounted to hold the X-10 at the food port plate (center of the X-10), or hung from the X-10 handle (top of the unit). Either mounting allows easy X-10 removal when needed. The X-10MT is constructed from heavy gauge cold rolled steel with a durable powder-coat finish.